Instructions for use

WASHER-DRYER





English,1

15, عربي

WIDXL 102

Contents

Installation, 2-3-4-5

Unpacking and levelling Electric and water connections The first wash cycle Technical details

Washer-dryer description, 6-7

Control pane Leds

Starting and Programmes, 8

Briefly: how to start a programme Programme table

Personalisations, 9

Setting the temperature Setting the drying cycle Functions

Detergents and laundry, 10

Detergent dispenser Bleach cycle Preparing your laundry Special items

Precautions and advice, 11

General safety
Disposal
Saving energy and respecting the environment

Care and maintenance, 12

Cutting off the water or electricity supply Cleaning your appliance Cleaning the detergent dispenser Caring for your appliance door and drum Cleaning the pump Checking the water inlet hose

Troubleshooting, 13

Service, 14

Before calling for Assistance



GB

Installation


I Keep this instruction manual in a safe place for future reference. Should the appliance be sold, transferred or moved, make sure the instruction manual accompanies the washer-dryer to inform the new owner as to its operation and features.

Read these instructions carefully: they contain vital information on installation, use and safety.

Unpacking and levelling

Unpacking

- 1. Unpack the washer-dryer.
- 2. Check whether the washer-dryer has been damaged during transport. If this is the case, do not install it and contact your retailer.

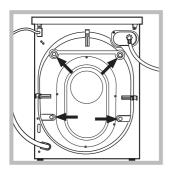

3. Remove the four protective screws and the rubber bush with the respective spacer, situated on the rear of the appliance (see also the installation leaflet).

NB:The plastic spacers may fall down inside the machine once the bolt

has been removed, and will not interfere with the operation of the machine.

- 4. Seal the gaps using the plastic plugs provided.5. Keep all the parts: you will need them again if the washing machine needs to be moved to another location.
- ! Packaging materials are not children's toys.

Levelling

Your machine may make a considerable amount of noise if the two front feet have not been adjusted correctly.

1. Install the washer-dryer on a flat sturdy floor, without resting it up against walls, furniture cabinets or other.




2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured according to the worktop, must not exceed 2°.


Levelling your appliance correctly will provide it with stability and avoid any vibrations, noise and shifting during operation. If it is placed on a fitted or loose carpet, adjust the feet in such a way as to allow enough room for ventilation beneath the washer-dryer.

Electric and water connections

Connecting the water inlet hose

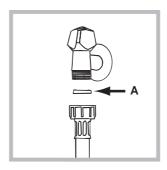


1. Insert seal A into the end of the inlet hose and screw the latter onto a cold water tap with a 3/4 gas threaded mouth (see figure). Before making the connection, allow the water to run freely until it is perfectly clear.

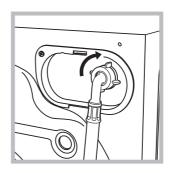


- 2. Connect the other end of the water inlet hose to the washer-dryer, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure).
- 3. Make sure there are no kinks or bends in the hose.
- I The water pressure at the tap must be within the values indicated in the Technical details table (on the next page).
- If the water inlet hose is not long enough, contact a specialist store or an authorised serviceman.
- I Ensure that the supply taps are allowing water through. Old taps may seize in the closed position and thus prevent water reaching the machine.




Connecting the drain hose

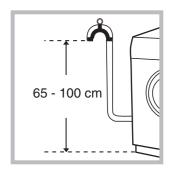

Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor;

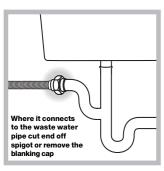

The drain hose may be connected to an under-sink trap. Before connecting the drain hose from the machine ensure that any blanks or removable ends have been taken off the spigot.

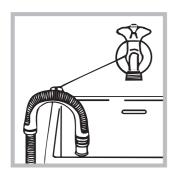

If it is place over the edge of a basin or sink be sure the free end of the hose should not be underwater.

Legislation We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length.

Ensure that if the drain hose is pushed into a standpipe, that the end does not go down more than 15cms (6 inches). If the hose is pushed down too far, this may cause the machine to self -syphon ie. continuously empty as it is filling.

Electric connection

Before plugging the appliance into the mains socket, make sure that:

- the socket is earthed and in compliance with the applicable law;
- the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (see page 5);

- the supply voltage is included within the values indicated on the Technical details table (see page 5);
- the socket is compatible with the washer-dryer's plug. If this is not the case, replace the socket or the plug.

Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use. Before using the appliance please read the instructions below.

WARNING - THIS APPLIANCE MUST BE EARTHED. THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.

Replacing the fuse:

When replacing a faulty fuse, a 13 amp ASTA approved fuse to BS 1362 should always be used, and the fuse cover re-fitted. If the fuse cover is lost, the plug must not be used until a replacement is obtained.

Replacement fuse covers:

If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Replacements can be obtained directly from your nearest Service Depot.

Removing the plug:

If your appliance has a non-rewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc., please ensure that either:

the plug is replaced by a fused 13 ampere rewearable plug bearing the BSI mark of approval. or:

the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance.

Disposing of the plug:

Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket.

Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code:

Green & Yellow Earth
Blue Neutral
Brown Live

As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

Connect Green & Yellow wire to terminal marked **E** or $\underline{\ }$ or coloured Green or Green & Yellow.

Connect Brown wire to terminal marked **L** or coloured Red.

Connect Blue wire to terminal marked ${\bf N}$ or coloured Black.

If a 13 amp plug (BS 1363) is used it must be fitted with a

13 amp fuse, either in the plug or adaptor or at the distribution board.


If you are in any doubt the electrical supply to your machine, consult a qualified electrician before use. How to connect an alternative plug:

The wires in this mains lead are coloured in accordance with the following code:

BLUE NEUTRAL (N)
BROWN LIVE (L)
GREEN & YELLOW EARTH (E)

Disposing of the appliance:

When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above.

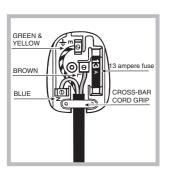

- I The washing machine should not be installed in an outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms.
- I When the washing machine is installed, the mains socket must be within easy reach.
- ! Do not use extensions or multiple sockets.
- I The power supply cable must never be bent or dangerously compressed.
- I The power supply cable must only be replaced by an authorised serviceman.

Warning! The company denies all liability if and when these norms are not respected.


The first wash cycle

Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle.



Technical de	tails
Model	WIDXL 102
Dimensions	59.5 cm wide 85 cm high 53.5 cm deep
Capacity	from 1 to 6 kg for the wash programme; from 1 to 4 kg for the drying programme
Electric connections	please refer to the technical data plate fixed to the machine
Water connections	maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 52 litres
Spin speed	up to 1000 rpm
Control programmes according to EN 50229 directive	Wash: programme 2; temperature 60°C; run with a load of 6 kg. Drying: first drying cycle performed with a 2 kg load and the DRYING knob on the setting; Second drying cycle performed with a 4 kg load and the DRYING knob on the setting.
CE Z	This appliance is compliant with the following European Community Directives: - 89/336/CEE of 03/05/89 (Electromagnetic Compatibility) and subsequent amendments - 2002/96/CE - 2006/95/CE (Low Voltage)

Washer-dryer description

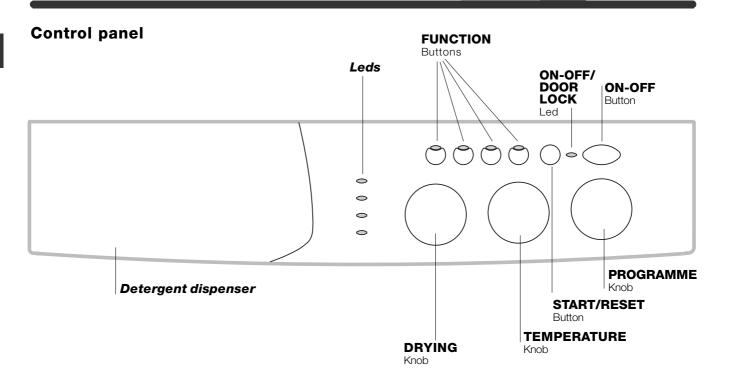

Detergent dispenser: to add detergent and fabric softener (see page 10).

LEDS: to find out the wash cycle progress.

DRYING knob: to set the desired drying cycle (see page 9).

FUNCTION buttons: to select the functions available. The button corresponding to the function selected will remain on.

TEMPERATURE knob: to set the temperature or the cold wash cycle (see page 9).

START/RESET button: to start the programmes or cancel any incorrect settings.

ON-OFF/DOOR LOCK Led: to find out whether the Washer-dryer is on and if the appliance door can be opened (see page 7).

ON/OFF button: to turn the Washer-dryer on and off.

PROGRAMME knob: to select the wash programmes. The knob stays still during the cycle.



GB

Leds

The LEDS provide important information.

This is what they can tell you:

Cycle progress:

During the wash cycle, the LEDs gradually illuminate on to indicate the cycle progress:





Prewash / Wash





Rinse

Spin cycle





Drying

- during draining, the LED corresponding to the Spin cycle phase will be turned on.
- when the drying cycle is complete, the indicator light relative to phase -O- will flash, to indicate that the DRYING knob needs to be set back to the 0 setting.

Function buttons

The FUNCTION BUTTONS also act like LEDS. When a function is selected, the corresponding button is illuminated.

If the function selected is incompatible with the programme set, the button will flash and the function will not be enabled.

If you set a function that is incompatible with another function you selected previously, only the last one selected will be enabled.

ON-OFF/DOOR LOCK led:

If this LED is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damages, wait for the LED to flash before you open the appliance door.

I The rapid flashing of the ON-OFF/DOOR LOCK Led together with the flashing of at least one other LED indicates there is an abnormality. Call for Technical Assistance (see page 13).

Starting and Programmes

Briefly: starting a programme

- 1. Switch the Washer-dryer on by pressing button ().
 All the LEDS will light up for a few seconds and the ON-OFF/DOOR LOCK Led will begin to flash.
- 2. Load your laundry into the washing machine and shut the appliance door.
- Set the PROGRAMME knob to the programme required.
- 4. Set the wash temperature (see page 9).
- 5. Set the drying cycle if necessary (see page 9).
- 6. Add the detergent and any fabric softener (see page 10).
- 7. Start the programme by pressing the START/RESET button for one second. Once the programme has been accepted all of the option and status LED's will illuminate momentarily, the Door Lock LED i will be lit and the relevant wash cycle progress LED will also be lit.
 - To cancel it, keep the START/RESET button pressed for at least 2 seconds.
- 8. When the programme is finished, the ON-OFF/DOOR LOCK Led will flash to indicate that the appliance door can be opened. Take out your laundry and leave the appliance door ajar to allow the drum to dry thoroughly. Turn the Washer-dryer off by pressing button (1).

Programme table

Programme table	-						Oll by pi	essing b		D [.]	
Type of fabric and degree of soil	Prog.	Temp.	. Cycle			Fabric softener	Stain removal option/	Cycle length (minutes)	Max. Spin Speeds	Description of wash cycle	
	wash wash bloom		bleach	(iiiiiutes)	(r.p.m.)						
Standard											
Extremely soiled whites (sheets, tablecloths, etc.)	1	90°C	•	•	•	•		155	Max.	Pre-wash, wash cycle, rinse cycles intermediate and final spin cycles	
Extremely soiled whites (sheets, tablecloths, etc.)	2	90°C	•		•	•	Delicate/ Traditional	150	Max.	Wash cycle, rinse cycles, intermediate and final spin cycles	
Heavily soiled whites and fast colours	2	60°C	•		•	•	Delicate/ Traditional	140	Max.	Wash cycle, rinse cycles, intermediate and final spin cycles	
Heavily soiled whites and delicate colours	2	40°C	•		•	•	Delicate/ Traditional	125	Max.	Wash cycle, rinse cycles, intermediate and final spin cycles	
Slightly soiled whites and delicate colours (shirts, jumpers, etc.)	3	40°C	•		•	•	Delicate/ Traditional	85	Max.	Wash cycle, rinse cycles, intermediate and final spin cycles	
Heavily soiled fast colours (baby linen, etc.)	4	50°C	•		•	•	Delicate	72	800	Wash cycle, rinse cycles, anti- crease or delicate spin cycle	
Heavily soiled fast colours (baby linen, etc.)	4	40°C	•		•	•	Delicate	70	800	Wash cycle, rinse cycles, anti- crease or delicate spin cycle	
Wool	5	40°C			•	•		50	600	Wash cycle, rinse cycles, delicate spin cycle	
Very delicate fabrics (curtains, silk, viscose, etc.)	6	30°C			•	•		45	no	Wash cycle, rinse cycles, anti- crease or draining cycle	
Drying cotton	7		•						Max.		
Drying delicates	8		•						no		
Time 4 you											
Heavily soiled whites and fast colours	9	60°C			•	•		60	Max.	Wash cycle, rinse cycles, intermediate and final spin cycles	
Delicate colours (all types of slightly soiled garments)	10	40°C			•	•		40	800	Wash cycle, rinse cycles, delicate spin cycle	
Delicate colours (all types of slightly soiled garments)	11	30°C	•		•	•		30	800	Wash cycle, rinse cycles and delicate spin cycle	
Sport											
Sports shoes (MAX. 2 pairs)	12	30°C			•	•	50 800 wash cycle, rinse cycles, and		Cold wash (without detergents), wash cycle, rinse cycles, and delicate spin cycle		
Fabrics for sportswear (Tracksuits, shorts, etc.)	13	30°C			•	•		60	600	Wash cycle, rinse cycles, intermediate and final spin cycles	
PARTIAL PROGRAMMES											
Rinse	♣♣		•			•	Delicate/ Traditional		800	Rinse cycles and spin cycle	
Spin cycle	6		•						800	Draining and spin cycle	
Drain	in 🙀					no	Drain				

Notes

- -For programme 9, we advise against exceeding a wash load of 3.5 kg.
- -For programme 13 we advise against exceeding a wash load of 2 kg.
- -For the anti-crease function: see Easy iron, opposite page. The information contained in the table is purely indicative.

Special programme

Daily (programme 11 for Synthetics) is designed to wash lightly soiled garments in a short amount of time: it only lasts 30 minutes and allows you to save on both time and energy. By setting this programme (11 at 30°C), you can wash different fabrics together (except for woollen and silk items), with a maximum load of 3 kg. We recommend the use of liquid detergent.

Personalisations



§ Setting the temperature

Turn the TEMPERATURE knob to set the wash temperature (see Programme table on page 8). The temperature can be lowered, or even set to a cold wash (*).

The data contained in the table are purely indicative.

GB

★ Set the drying cycle

Turn the DRYING knob to set the desired drying type. Two options are available:

A - Based on time: From 40 minutes to 150.

B - Based on the damp level of the dry clothes:

Iron : slightly damp clothes, easy to iron.

Hanger 🕆: dry clothes to put away.

Cupboard :: very dry clothes, recommended for towelling and bathrobes.

A cooling stage is foreseen at the end of the drying cycle.

If your laundry load to wash and dry is exceptionally in excess of the maximum load foreseen (see table opposite), perform

Fabric type	Load type	Max. load (kg)	Cup- board	Hanger	\to Iron
Cotton, Linen	Clothing of different sizes	4	130	120	110
Cotton	Terry towels	4	130	120	110
Terital, Cotton	Sheets, Shirts	2,5	90	80	70
Acrylics	Pyjamas, socks, etc.	1	65	60	60
Nylon	Slips, tights, stockings, etc.	1	65	60	60

Table of drying times

the wash cycle, and when the programme is complete, divide up the garments and put part of them back in the drum. Now follow the instructions provided for a **dry only** cycle. Repeat this procedure for the remainder of the load.

Dry only

Turn the PROGRAMME knob to one of the drying settings (7-8) depending on the type of fabric, then select the desired drying type using the DRYING knob.

Important: - A spin cycle is carried out during the drying if you have set a **cotton programme** and a level of dryness (Cupboard , Hanger , Iron).

- For cotton loads of less than 1 Kg, use the drying programme designed for delicate fabrics.

Functions

To enable a function:

- 1. press the button corresponding to the desired function, according to the table below;
- 2. the function is enabled when the corresponding button is illuminated.

Note: The rapid flashing of the button indicates that the corresponding function cannot be selected for the programme set.


Function	Effect	Comments	Enabled with programmes:
Stain removal	Bleaching cycle designed to remove the toughest stains.	Please remember to pour the bleach into extra compartment 4 (see page 10). This function is incompatible with the EASY IRON function.	2, 3, 4, Rinse cycle.
Easy iron	This option reduces the amount of creasing on fabrics, making them easier to iron.	When this function is set, programmes 4, 6 will end with the laundry left to soak (Anti-crease) and the Rinse cycle phase LED will flash. - to conclude the cycle, press the START/RESET button; - to run the draining cycle alone, set the knob to the relative symbol and press the START/RESET button. This function is incompatible with the STAIN REMOVAL function. If you also want to run the drying cycle, this button is enabled only if combined with level (Iron).	3, 4, 6, 9, 10, Rinse cycle.
Extra Rinse	Increases the efficiency of the rinse.	Recommended when the appliance has a full load or with large quantities of detergent.	1, 2, 3, 4, 9, 10, 12, 13, Rinse cycle.
⑤ 1000-500	Reduces the spin speed.		All programmes except for 6, 7, 8 and draining.

If the machine has an intelligent built in check for out of balance loads. To let protect your machine it may reduce the final spin speed if an unbalanced load is detected.

Detergents and laundry

Detergent dispenser

Good washing results also depend on the correct dose of detergent: adding too much detergent won't necessarily make for a more efficient wash, and may in fact cause build up on the interior of your appliance and even pollute the environment.

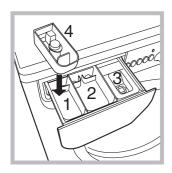

Open up the detergent dispenser and pour in the detergent and fabric softener, as follows.

compartment 1: Detergent for pre-wash (powder)

Before pouring in the detergent, make sure that extra compartment 4 has been removed.

compartment 2: Detergent for the wash cycle (powder or liquid)


Liquid detergent should only be poured in immediately prior to the wash cycle start.

compartment 3: Additives (fabric softeners, etc.)
The fabric softener should not overflow from the grid.
extra compartment 4: Bleach

I Do not use hand wash detergent because it may form too much foam.

Bleach cycle

! Traditional bleach should be used on sturdy white fabrics, and **delicate** bleach for coloured fabrics, synthetics and for wool.

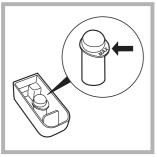

Place extra compartment 4, provided, into compartment 1. When pouring in the bleach, be careful not to exceed the "max" level indicated on the central pivot (see figure).

To run the bleach cycle alone, pour the bleach into extra compartment 4, set the Rinse programme and enable the Stain removal option (see page 9). To bleach during a wash cycle, pour in the detergent and fabric softener, set the desired programme and enable the Stain removal option (see page 9). The use of extra compartment 4 excludes the possibility of using the pre-wash cycle.

Preparing your laundry

- Divide your laundry according to:
 - the type of fabric/the symbol on the label.
 - the colours: separate coloured garments from whites.
- Empty all pockets and check for loose buttons.
- Do not exceed the weight limits stated below, which refer to the weight when dry:

Sturdy fabrics: max 6 kg Synthetic fabrics: max 2.5 kg Delicate fabrics: max 2 kg

Wool: max 1,5 kg

How much does your laundry weigh?

- 1 sheet 400-500 g
- 1 pillow case 150-200 g
- 1 tablecloth 400-500 g
- 1 bathrobe 900-1,200 g
- 1 towel 150-250 g

Special items

Curtains: fold curtains and place them in a pillow case or mesh bag. Wash them separately without exceeding half the appliance load. Use programme 6 which excludes the spin cycle automatically.

Quilted coats and windbreakers: if they are padded with goose or duck down, they can be machine-washed. Turn the garments inside out and load a maximum of 2-3 kg, repeating the rinse cycle once or twice and using the delicate spin cycle.

Wool: for best results, use a specific detergent, taking care not to exceed a load of 1,5 kg.

GB

Precautions and advice



I The Washer-dryer was designed and built in compliance with the applicable international safety regulations. The following information is provided for your safety and should consequently be read carefully.

General safety

- This appliance has been designed for nonprofessional, household use and its functions must not be changed.
- This washing machine should only be used by adults and in accordance with the instructions provided in this manual.
- Never touch the washing machine when barefoot or with wet or damp hands or feet.
- Do not pull on the power supply cable to unplug the appliance from the electricity socket. Pull the plug out yourself.
- Do not open the detergent dispenser while the appliance is in operation.
- Do not touch the drain water as it could reach very high temperatures.
- Never force the washing machine door: this could damage the safety lock mechanism designed to prevent any accidental openings.
- In the event of a malfunction, do not under any circumstances touch internal parts in order to attempt repairs.
- Always keep children well away from the appliance while in operation.
- The appliance door tends to get quite hot during the wash cycle.
- Should it have to be moved, proceed with the help of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy.
- Before loading your laundry into the washing machine, make sure the drum is empty.
- During the drying phase, the door tends to get quite hot.
- Do not use the appliance to dry clothes that have been washed with flammable solvents (e.g. trichlorethylene).
- Do not use the appliance to dry foam rubber or similar elastomers.
- Make sure that the water tap is turned on during the drying cycles.

Disposal

- Disposing of the packaging material: observe local regulations, so the packaging can be re-used.
- The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected

separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

Saving energy and respecting the environment

Environmentally-friendly technology

If you only see a little water through your appliance door, this is because thanks to the latest Ariston technology, your washing machine only needs less than half the amount of water to get the best results: an objective reached to respect the environment.

Saving on detergent, water, energy and time

- To avoid wasting resources, the Washer-dryer should be used with a full load. A full load instead of two half loads allows you to save up to 50% on energy.
- The pre-wash cycle is only necessary on extremely soiled garments. Avoiding it will save on detergent, time, water and between 5 and 15% energy.
- Treating stains with a stain remover or leaving them to soak before washing will cut down the need to wash them at high temperatures. A programme at 60°C instead of 90°C or one at 40°C instead of 60°C will save up to 50% on energy.
- Use the correct quantity of detergent depending on the water hardness, how soiled the garments are and the amount of laundry you have, to avoid wastage and to protect the environment: despite being biodegradable, detergents do contain ingredients that alter the natural balance of the environment. In addition, avoid using fabric softener as much as possible.
- If you use your washing machine from late in the afternoon until the early hours of the morning, you will help reduce the electricity board's peak load.
- If your laundry has to be dried in a tumble dryer, select a high spin speed. Having the least water possible in your laundry will save you time and energy in the drying process.


Cutting off the water or electricity supply

- Turn off the water tap after every wash. This will limit the wear of your appliance's water system and also prevent leaks.
- Unplug your appliance when cleaning it and during all maintenance operations.

Cleaning your appliance

The exterior and rubber parts of your appliance can be cleaned with a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives.

Cleaning the detergent dispenser

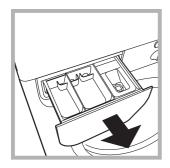

Remove the dispenser by raising it and pulling it out (see figure). Wash it under running water; this operation should be repeated frequently.

Caring for your appliance door and drum


 Always leave the appliance door ajar to prevent unpleasant odours from forming.

Cleaning the pump


The Washer-dryer is fitted with a self-cleaning pump that does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber that protects the pump, situated in the lower part of the same.

I Make sure the wash cycle has ended and unplug the appliance.

To access the pre-chamber:

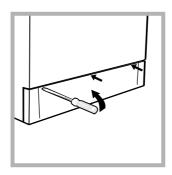

1. using a screwdriver, remove the cover panel on the lower front of the Washer-dryer (see figure);

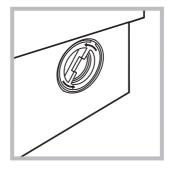

2. unscrew the lid rotating it anti-clockwise (see figure): a little water may trickle out. This is perfectly normal:

- 3. clean the interior thoroughly;
- 4. screw the lid back on;
- 5. reposition the panel, making sure the hooks are securely in place before you push it onto the appliance.

Checking the water inlet hose

Check the water inlet hose at least once a year. If you see any cracks, replace it immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open.

! Never use hoses that have already been used.

Troubleshooting



Your washer-dryer could fail to work. Before calling for Assistance (see page 14), make sure the problem can't easily be solved by consulting the following list.

GB

Problem

The washer-dryer won't start.

Possible causes/Solution:

- The appliance is not plugged into the socket, or not enough to make contact.
- There has been a power failure.
- The appliance door is not shut properly.
- The (I) button has not been pressed.
- The START/RESET button has not been pressed.

NB: It should be held minimum one second.

- The water tap is not turned on.
- The washer-dryer does not fill with water.
- The water inlet hose is not connected to the tap.
- The hose is bent.
- The water tap is not turned on.
- There is a water shortage.
- The water pressure is insufficient.
- The START/RESET button has not been pressed.

The machine continuously fills and empties with water.

- The drain hose is too low or too far in to the stand pipe (see page 3) for correct installation.
- The wall drainage system doesn't have a standard pipe (min. 38 mm).

The washer-dryer does not drain or spin.

- Some programs have a slower final spin to taked best care of the fabrics. See *page* 8 for details of the final spin speed for each program.
- The programme does not foresee the draining: some programmes require enabling the draining manually (see page 8).
- The Easy iron option is enabled: to complete the programme, press the START/RESET button (see page 9).
- The drain hose is bent (see page 3).
- Remove the drain hose from the standpipe or under-sink trap and check for blockages, ensuring that the water can drain freely away from the machine.

The washer-dryer vibrates too much during the spin cycle.

- When the machine is installed, the locking screws for the oscillating assembly are still in place. Remove the screws (see page 2).
- The washer-dryer is not level (see page 2).
- The washer-dryer is closed in between furniture cabinets and the wall (see page 2).

The washer-dryer leaks.

- The water inlet hose is not screwed on correctly (see page 2).
- The detergent dispenser is obstructed (to clean it, see page 12).
- The drain hose is not secured properly (see page 3).

The ON-OFF/DOOR LOCK Led flashes rapidly at the same time as at least one other LED.

- This means there is a problem with the machine. Before calling Assistance, please follow the set of instructions below:
 - 1. Switch off the machine;
 - 2. Remove the plug connecting the appliance to the mains supply and wait for at least 40 seconds;
 - 3. Place the plug back into the socket;
 - 4. Switch on the machine;
 - 5. If the problem is still evident after this process has been carried out, contact Assistance.

There is too much foam.

- The detergent is not suitable for machine washing (it should bear the definition "for washing machines" or "hand and machine wash", or the like).
- You used too much detergent.

The washer-dryer does not dry.

- The appliance is not plugged into the socket, or not enough to make contact.
- There has been a power failure.
- The appliance door is not shut properly.
- the DRYING knob is on the 0 setting.

Before calling for Assistance:

- Check whether you can solve the problem on your own (see page 13);
- Restart the programme to check whether the problem has been solved;
- If this is not the case, contact an authorised Technical Service Centre on the telephone number provided on the guarantee certificate.
- I If the machine has been installed or used incorrectly, you may be charged for the maintenance callout
- ! Always request the assistance of authorised servicemen.

Notify the operator of:

- the type of problem;
- the appliance model (Mod.);
- the serial number (S/N).

This information can be found on the data plate situated on the rear of the washer-dryer.

الفهرس

التركيب 16 - 17 - 18 - 19

اخراج الجهاز من تغليفه و تسوية الجهاز، 16 توصيلات الماء والهرباء، 16 - 17 أول دورة غسيل، 18 مواصفات فنية، 19

وصف غسالة نشافة الملابس 21-20

لوحة القيادة، 20 صابيح انذار، 21

التشغيل و البرمجة، 22

ببساطة: تشغيل برنامج، 22 لوحة البرامج، 22

تشخيص، 23

وضع درجة الحرارة؛ 23 وضع عملية التنشيف، 23 وظائف، 23

مساحيق غسيل و ملابس، 24

حوض مساحيق الغسيل، 24 دورة النبيض، 24 تحضير الملابس للغسيل، 24

أقمشة خاصة، 24

حذر ونصائح، 25

أمن عام، 25 التخلص من النفايات، 25 الاقتصاد و واحترام البيئة، 25

صيانة و حماية، 26

اغلاق الماء و التيار الكهربائي، 26 نظيف غسالة نشافة الملابس، 26 نظيف حوض مساحيق الغسيل، 26 حماية باب الغسالة نشافة و حوض غسيل الغسالة، 26 نظيف مضخة تفريغ الغسالة نشافة من الماء، 26 فحص خرطوم تغذية الغسالة نشافة ما بالماء، 26

حصول بعض المشاكل وحلول لها، 27

الصيانة الفنية، 28

عربي

WIDXL 102



تعليمات من أجل الاستعمال

ل من المهم الحفاظ على هذا الكتيب ليمكنكم العودة اليه عند الحاجة الى التعرف على معلومات عن الجهاز في أي لحظة، في حالة بيع الجهاز أو اعطاءه كهدية أو عند نقل الجهاز من مكان لاخر، تأكدوا من أن يبقى هذا الكتيب نع الجهاز وذلك لتقديم معلومات تتعلق بتشعيل وبرمجة الجهاز بالاضافة الى النصائح والتحذير للمالك الجديد للجهاز

! أقرؤوا بتمعن التعليمات: في داخل هذا الكتيب موجود معلومات هامة تتعلق بالتركيب، الاستعمال، وأمن الجهاز.


اخراج الجهاز من تغليفه وتسوية الجهاز


اخراج الجهاز من تغليفه

1. اخرجوا الغسالة النشافة من تغليفها

2. تأكدوا من الغسالة النشافة لم يحدث لها أضرار خلال شحنها ونقلها من مكان لاخر، اذا كان الجهاز مضرر أو مضروب في مكان ما لا تقوموا بعملية توصيله أو تركيبه، واتصلوا بالبائع.

3. اخلعوا الأربع براغى التي تحمى الخلفية من الجهاز (انظر الى الشكل)

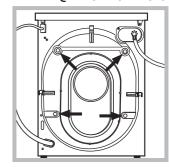

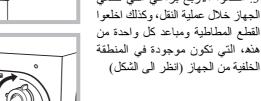

لدخول الهواء من أجل التهوية.

توصيل خرطوم تغذية الجهاز بالماء

توصيل الماء والكهرباء بالجهاز

2. اشبكوا الخرطوم الذي يغذي الغسالة النشافة بالماء وذلك بربطه بمدخل الماء الموجود في ظهر الغسالة من الخلف في المنطقة العليا على اليمين (انظر الى الشكل)

1. أدخلوا حلقة عدم تسرب الماء المشار لها بالحرف A في نهاية خرطوم و اربطوه

بنحبس ماء بارد بفتحة مسننه بسن 4/3

قبل وصله بالجهاز اتركوا الماء يخرج

من المحبس حتى خروج ماء صافية من

غاز (انظر الى الشكل)

4. اغلقوا الثقوب بواسطة الأغطية البلاستيكية التي تكون مزودة مع الجهاز.


5. أغلقوا بالأغطية التي تكون مزودة مع الجهاز الثلاث ثقوب حيث يكون موضوع قابس التيار الكهربائي (الذكر) الذي يكون موجود في خلف الجهاز من الأسفل على اليمين.

6. حافظوا على جميع القطع التي تم فكها: عند نقل الجهاز من مكان لاخر يجب تركيب هذه القطع مكانها من جديد.

ليجب عدم ترك الأطفال اللعب بتغليف الجهاز

تسوية الجهاز

1. ركبوا غسالة نشافة الملابس على أرضية مستوية وصلبة بدون أرتكازها على حائط أو قطع أثاث أو أي شيء اخر.

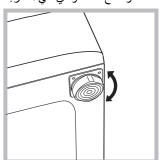

2. اذا كانت الأرضية غير مستوية، يمكنكم الاستعانة بالأرجل الأمامية المتحركة والتي قابلة التعديل في ارتفاعها وذلك لازالة عدم استواء الأرضية (اظر الى الشكل). زاوية الميلان التي يمكنكم قياستها على السطح العلوي للجهاز يجب أن لا يزيد عن 2 درجة.

3. خذوا حذركم من لا يكون الخرطوم مطوي أو مخنوق في مكان ما علة طول امتداده.

وضع الجهاز بشكل مستوي تعمل على ثبات الجهاز بمكانه وعدم ذبذبته، وعدم

سماع اصوات مزعجة خلال عمل الجهازأو تحرك الجهاز من مكانه خلال عمل

الجهاز، في حالة وجود مكيت أو سجاد على الأرضية تحت الجهاز عيروا الأرجل


تحت الجهاز بحيت يتم ترك مسافة بين اجهاز والأرضية تحته وذلك لترك حيز

ل ضغط شبكة الماء يجب أن تكون بالقيم التي تكون معطية ومكتوبة لائحة الخصائص الفنية للجهاز (انظر الى الصفحة الجانبية)


اذا كان طول خرطوم تغذية الغسالة النشافة بالماء غير كافي استعينوا بقسم الصيانة الفنية أو المحلات المختصة أو فنى مؤهل بالقيام بعمليات الصيانة الفنية.

(j) Indesit



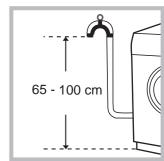

اوصلوا خرطوم تفريغ الماء من حوض غسيل الغسالة بدون طويه، بماسورة صرف للماء، أو بمصرف موجود في الحائط على أن يكون ارتفاعه ما بين 65 و 100 سنتمتر عن سطح الأرض

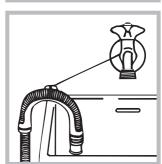

أو قوموا بوضعه على حافة مغسلة أو حوض حمام، اربطوا الخرطوم بحامل الخرطوم الذي يكون مزود مع الجهاز بمحبس الماء (انظر الى الشكل) الطرف الحر من الخرطوم يجب أن لا يكون مغمور في الماء.

غير منصوح استخدام خراطيم تطويل ، اذا كان من الضروري استخدام خراطيم التطويل يجب أن يكون قطر هذا الخرطوم نفس قطر الخرطوم الرئيسي ويجب أن لا يزيد طوله عن 150 سنتمتر.

التوصيل بشبكة التيار الكهربائي

قبل ادخال قابس النيار الكهربائي (الذكر) بمقبس النيار الكهربائي (الأنثى) تأكدوا من أن:

- مقبس التيار الكهربائي (الأنثى) لها خط أرض فعال وخاضع الى القوانين
- مقبس التيار الكهربائي (الأنثى) قادر على تحمل القدرة الكهربائية القصوى
 الممتصة من قبل الجهاز ويكون مشار لها في لائحة الخصائص الفنية للجهاز
 (انظر صفحة 19).
- فرق جهد شبكة الكهرباء يجب أن تكون في القيم التي تكون موجودة والمشار لها
 في لائحة الخصائص الفنية للجهاز (انظر صفحة 19).
- مقبس النيار الكهربائي (الأنثى) ملائم لقابس النيار الكهربائي (الذكر) المزود مع الغسالة في حالة عدم توافقهم قوموا بعملية تغيير احداهما.

جهازكم الكهربائي مزود بقابس (الذكر) مصهور وقادر على تحمل تيار كهربائي 13 أمبير ويمكنكم ادخال هذا القابس بمقبس (الانثى) يتوافق معة للاستخدام المباشر، اقرؤوا التعليمات التالية قبل استخدام الجهاز الكهربائي.

انتباه: الجهاز الكهربائي يجب أن يكون موصول بخط أرض فعال، العمليات المشروحة أدناه هي تعليمات موجه الى فني كهربائي مختص.

تغيير المنصهرة (الفيوز)

عند تغيير المنصهرة (الفيوز) المعطوب، استخدموا دائما منصهرة 13 امبير ASTA خاضعة للمقياس BS 1362 وأعيدوا غطاء المنصهرة الى مكانه الذي كان فيه، في حالة فقدان هذا الغطاء لا تستخدموا القابس حتى الحصول على هذا الغطاء وتركيبه في مكانه.

تغيير غطاء المنصهرات (الفيوزات):

اذا تم تغيير غطاء الفيوزات تاكدوا من أن لونه هو اللون الصحيح والمشار له بواسطة الرقم أو الكتابة الملونة الموجودة على قاعدة القابس، لقطع الغيار، استعينوا مباشرة بقسم الصيانة الفنية القريب عليكم.

فك القابس (الذكر):

في حالة أن يكون الجهاز مزود بقابس (الذكر) لا يمكن فكه لأنه مصهور وتريدون تمرير سلك التغذية الكهربائية من خلال ثقوب أو فتحات صغيرة لا يمر من خلالها القابس قوموا بتغيير القابس المصهور بقابس يمكن فكه وتركيبه وقادر على تحمل 13 أمبير ويحمل الشعار BSI.

أو

وصل سلك التغذية الكهربائية بمنبع التيار الكهربائي بواسطة مفتاح قادر على تحمل 13 أمبير (وخاضع للمقياس 5733 BS) يمكن الوصول اليه بدون تحريك الجهاز من مكانه.

ازالة القابس (الذكر):

قبل رمي القابس اجعلوة غير قابل للاستعمال وذلك بكسر رؤوسه بحيث لا يمكن ادخاله داخل ثقوب مقبس (الانثى) بشكل عفوي.

تعليمات من أجل توصيل سلك التعذية الكهربائية بقابس (الذكر):

مهم: ألوان الأسلاك التغذيه الكهربائية تشير الى التالى:

أمبير في المقبس أو في المهاي أو على لوحة التوزيع.

أصفر/أخضر خط أرض ازرق محايد (نيوترل) بنى تغذية

ولأن ألوان سلك التغذية الكهربائية يمكن أن لا يطابقوا الاشارات الملونة التي تعرف مرابط القابس، اتبعوا الخطوات التالية:

أوصلوا السلك الأصفر/الأخضر بالمربط المشار له بالحرف E أو بالشعار $\stackrel{}{=}$ أو الأصفر/الأخضر المؤذن الأخضر أو الأصفر/الأخضر



درجة مئوية بدون عملية غسيل بدائية.

بعد الانتهاء من عملية تركيب الجهاز، وقبل استخدامه، قومو ا بعملية غسيل مستخدمين

مسحوق غسيل وبدون ملابس داخل الغسالة، مستخدمين برنامج الغسيل على 90

في حالة الشك بالتغذية الكهربائية لجهازكم استدعوا فني كهربائي مختص قبل أول دورة غسيل وصل الجهاز بمنبع التيار الكهربائي.

وصل قابس (الذكر) بديل:

ألوان الأسلاك التغذيه الكهربائية تشير الى التالي:

محاید (نیوترل) (N) ازرق تغذية (L) بني

> خط أرض (E) أصفر/أخضر

ازالة الجهاز الكهربائي البيتي:

عند رمي جهاز كهربائي بيتي، يجب ازالة قابس التيار الكهربائي (الذكر) وذلك بقص سلك التغذية الكهربائية بأقرب نقطة ممكنة من القابس وقوموا بتحطيم رؤوس القابس كما ذكر سابقا



الغسالة لا توضع في الخارج حتى لو كان المكان مغطى وذلك لأنه من الخطر ترك الجهاز تحت عوامل الطقص مثل المطر برق رعد الى اخره.

بعد الانهاء من تركيب الجهاز يجب أن يكون من السهل الوصول الى مقبس التيار الكهربائي (الأتثي).

لا تستخدموا مهايئات او مقبس متعدد الثقوب أو اسلاك تطويل.

سلك التغذية الكهربائية يجب أن لا يكون مطوي أو محشور بين الأثاث.

سلك التغنية الكهربائية يجب أن يتم تبديله وقت الحاجة فقط من قبل فني مختص ومؤهل للقيام بهذا


انتباه: الشركة الصانعة تسقط عن نفسها أي مسؤولية عن أضرار قد تحصل من عدم اتباع واحترام هذه قواعد الأمن.



	مواصفات فنية
WIDXL 102	المديل
العرض 59.5 سنتمتر الارتفاع 85 سنتمتر العمق 53.5 سنتمتر	الأبعاد
من 1 الى 6 كغم في عملية الغسيل من 1 الى 4 كغم في عملية التنشيف	القدرة
فرق جهد 240/230 فولت 50 هيرتز القصوى الممتصة من قبل الجهاز 2050 واط	التوصيلات الكهربائية
الضغط القصوى 1 ملبسكال (10 بار) الضغط الدنيا 0.05 ميليبسكال (0.5 بار) قدرة حوض الغسيل 52 لنز	التوصيلات الهيدروليكية
حتى 1000 دورة في الدقيقة	سرعة العصر الدورانية
الغسيل: برنامج 2، درجة حرارة 60 درجة مئوية، تمت التجربة بحمل غسيل 6 كغم التتشيف: التشيف الأول تم بحمل 2 كغم وباختيار زمن تنشيف كدقيقة، التشيف الثاني تم بحمل 4 كغم وبوضع مقبض التتشيف على الوضع	برامج تجربة الجهاز حسب القواعد EN 50229
هذا الجهاز يطابق المواصفات المطلوبة من سوق الدول الأوربية المشتركة: - بما يتعلق بفرق جهد منخفض - بما يتعلق التوافق الكهرومغناطيسي	((

(عربي)

لوحة القيادة

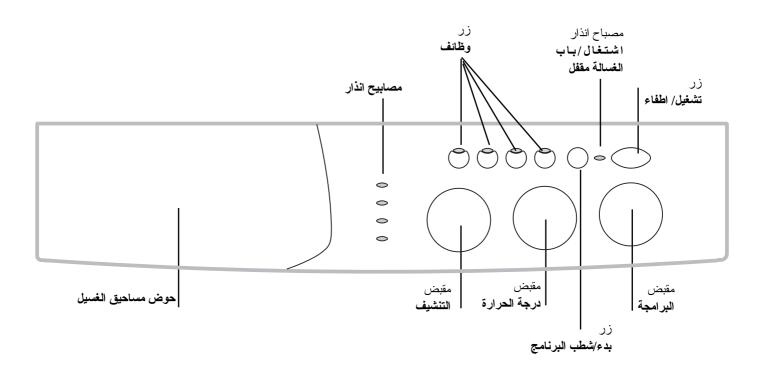

حوض مساحيق الغسيل لوضع مساحيق الغسيل والمساحيق الاضافية (انظر صفحة رقم 24)

مصابيح الانذار لمراقبة حالة تقدم برنامج الغسيل خلال عمله

مقبض التنشيف لوضع وبرمجة عملية التتشيف التي ترغبون استخدامها (انظر صفحة 23)

أزر ار **الوظائف** لاختيار الوظائف التي تكون مزودة بها غسالة نشافة الملابس، الزر الذي يقوم بتشغيل احدي الوظائف يكون مضيء عند اختياره.

مقبض درجة الحرارة لوضع درجة حرارة الغسيل أو القيام بعملية الغسيل بماء بارد (انظر الى صفحة 23)

زر بدء/شطب البرنامج START/RESET لتشغيل البرامج أو الغائها عندما يقع خطأ في البرمجة

مصباح انذار اشتغال/باب الغسالة النشافة مقفل لفهم اذا ما كانت غسالة نشافة الملابس تشتغل و اذا كان من الممكن فتح باب الغسالة النشافة (انظر الى صفحة 21)

زر تشغيل/اطفاء لتشغيل واطفاء الغسالة النشافة.

مقبض البرمجة لوضع البرامج (انظر الى صفحة 22)، خلال البرنامج يبقى المقبض ثابت في مكانه.



مصابيح الانذار

مصابيح الانذار يقدمون معلومات هامة.

ها هو ما يقدمون من معلومات:

مرحلة بالعمل

خلال دورة الغسيل مصابيح الانذار تضيء واحد تلو الاخر ليشيركل واحد من هذه المصابيح الى تقدم برنامج الغسيل:

الغسيل العادي الغسيل العادي العادي

الفضيفضية الفضيفضية

عملية العصر الدورانية

- التشيف حملية التشيف

ملاحظة:

- خلال عملية تقريغ الماء من حوض غسيل الغسالة النشافة يضيء المصباح الخاص بعملية العصر الدورانية.
- عند انتهاء دورة التنشيف، المصباح الذي يشير الى هنه المرحلة $\dot{\gamma}_{\gamma}$. يبدأ بالاضاءة وانطفاء بشكل متردد ليشير الى انه يجب اعادة وضع مقبض التنشيف الى الوضع 0.

ازرار وظائف

ررار الوظائف لهم أيضا وظيفة مصباح انذار. عند اختيار احد الوظائف لهم أيضا وظيفة مصباح انذار. عند اختيار احد الوظائف يضيء الزر الخاص بهنه الوظيفة. اذا كانت الوظيفة المختارة لا تتوافق مع برنامج الغسيل المختار يبدأ هذا الزر بلاضاءة والانطفاء المتردد وهنه الوظيفة لا يتم تشعيلها. في حالة عدم توافق الوظيفة المختارة مع الوظيفة التي تم اختيارها مسبقا تبقى تعمل فقطكخر وظيفة مختارة

🗈 مصباح الانذار الذي يشير بتشغيل الغسالة النشافة/الباب مقفل

عندما يكون مصباح الانذا مضيء يشير الى أن باب الغسالة النشافة مقفل وذلك لتجنب فتح باب الغسالة النشافة بشكل عرضي، لتجنب حدوث أضرار لباب الغسالة النشافة من الضروري الانتظار حتى يبدأ هذا المصباح بالاضاءة وانطفاء المتردد قبل القيام بعملية فتح باب الغسالة النشافة.

! الاضاءة والانطفاء المتردد السريع لمصباح الانذار الذي يشير الى عمل الغسالة النشافة/باب الغسالة النشافة مقفل مع اي مصباح اخر يشير الى وجود عطب في الغسالة النشافة ولهذا يجب استدعاء قسم الصيانة الفنية.

تشغيل البرامج

ببساطة: تشغيل برنامج

1. شغل غسالة نشافة الملابس وذلك بالضغط على الزر

جميع مصابيح الانذار تضيء لبعض الثواني ومن ثم ينطفؤون، ويبدأ المصباح الذي يشير الى عمل الغسالة النشافة /باب الغسالة النشافة مقفل يبدأ بالاضاءة و الانطفاء المتردد.

3. اختار بواسطة مقبض البرامج البرنامج الذي تودون استخدامه،

4. ضعوا درجة حرارة الغسيل (انظر الى صفحة رقم 23)

2. امليء الغسالة النشافة بالملابس المراد غسلها واغلق باب الغسالة النشافة

لائحة البرامج

5. ضعوا عملية التنشيف اذا كان من الضروري (انظر الى صفحة رقم 23)

6. صب مسحوق الغسيل والمساحيق الاضافية (انظر صفحة 24)

7. شغل البرنامج بالضغط على الزر بدء/شطب START/RESET

لشطب البرنامج المختار اضغط على الزر بدء/شطب START/RESET لمدة 2 ثانية على الأقل 8. عند انتهاء برنامج الغسيل المصباح الذي يشير الى عمل الغسالة/باب الغسالة النشافة مقفل ببدأ بلاضاءة

والانطفاء بشكل متردد ليشير الى انه من الممكن الآن فتح باب الغسالة النشافة، اخرج الملابس من الغسالة النشافة واترك باب الغسالة النشافة مفتوح نصف فتحة لينشف حوض الغسيل.

اطفئ الغسالة النشافة وذلك بالضغط على الزر (

		مبیضات تا منیضات								
وصف دورة الغسير	مدة البرنامج		منعمات					حرارة	رنامج	طبيعة الأنسجة ودرجة وساختها
	(دقائق)	ضد البقع		عادي	بدائي					
								أنسجة عادية		
غسيل بدائي، غسيل عادي، عملية فضفضة، عملية عصر	155						1	بيضاء كثيرة الوسخ (شراشف تخوت، شراشف		
دورانية متوسطة وأخري نهائية	133		▼	▼	-	90 درجة	1	طاولات، الىكخره.)		
·			<u> </u>	-			_			
غسيل عادي، عملية فضفضة، عملية عصر دور انية متوسطة و أخري نهائية	150	حساسة عادية	•	◆		90 درجة	2	بيضاء كثيرة الوسخ (شراشف تخوت،		
·								شراشف طاو لات، الىكخره.)		
غسيل عادي، عملية فضفضة، عملية عصر دورانية متوسطة وأخري نهائية	140	حساسة عادية	•			60 درجة	2	بيضاء وملونة بألوان ثابتة كثيرة الوسخ		
وتحري مهايب			├	-						
غسيل عادي، عملية فضفضة، عملية عصر دور انية متوسطة وأخري نهانية	125	حساسة عادية	•	•		40 درجة	2	بيضاء وملونة حساسة كثيرة الوسخ		
غسيل عادي، عملية فضفضة، عملية عصر دور انية متوسطة							2	بيضاء قليلة الوسخ وملونة بألوان حساسة		
عسین عدي، عمليه تصفحه، عمليه عصر دور سيه سوسعه وأخري نهائية	85	حساسة عادية	•	◆		40 درجة	3	(قمصان، بلایز، الیکخره)		
·										
غسيل عادي، عملية فضفضة، عملية عصر دور انية متوسطة	72	حساسة	•	•		50 درجة	4	ألوان ثابتة كثيرة الوسخ (ملابس اطفال		
و أخري نهائية			L .	·				رضع، الى اخره)		
غسيل عادي، عملية فضفضة، عملية عصر دورانية متوسطة	70					40 درجة	4	ألوان ثابتة كثيرة الوسخ (ملابس اطفال		
و أخري نهائية		حساسة				.5 .0		رضع، الى اخره)		
غسيل عادي، عملية فضفضة، عملية عصر دور انية متوسطة وأخري نهائية	50					i 40	5	صوف		
وأخري نهائية	50		•	•		40درجة	3			
عسيل عادي، عملية فضفضة، ضد الجعلكة، عصر دور اني حساس	45		•	•		30 درجة	6	انسجة حساسة جدا (برادي، حرير ،الخ)		
ــــــــــــــــــــــــــــــــــــــ			-							
							7	تتشيف انسجة قطنية		
							8	تتشيف انسجة حساسة		
							0	السيعة السجاد عسانية		
								الوقت لك Time 4 you		
								11110 . yeu 3		
غسيل عادي، عملية فضفضة، عملية عصر دورانية متوسطة وأخري نهانية	60		•	•		60 درجة	9	بيضاء وملونة ثابتة كثيرة الوسخ		
			- `							
غسيل عادي، عملية فضفضة، عملية عصر دور انية حساسة	40		◆	◆		40درجة	10	الوان حساسة (ملابس بمختلف الانواع		
								قليلة الوسخ).		
غسيل عادي، عملية فضفضة، عملية عصر دورانية حساسة	30			🔺		30 درجة	11	الوان حساسة (ملابس بمختلف الانواع		
						'	11	قليلة الوسخ).		
								Connect in the		
								ریاضة Sport		
فضفضة و عملية عصر دورانية	50			•		30 درجة	12	بوات رياضة (2 زوج على الأقصى)		
			_	_						
فضفضة، ضد الجعلكة أو تقريغ الماء من الغسالة	60		•	•		30 درجة	13	انسجة لملابس رياضية (بدلة رياضة،		
								شرطات، الخ)		
								برامج جزئية		
تفريغ الماء من الغسالة وعملية عصر دور انية قوية		حساسة عادية	•					عملية عصىر دورانية		
gag and the state of the state	-					\vdash				
تفريغ الماء من الغسالة وعملية عصر دور انية							<u></u>	عملية عصر دورانية		
sh ·h · · · h · · ·							1 1	عملية تقريغ الماء من الغسالة		
تفريغ الماء من الغسالة								عمليه نفريع الماء من العسالة		
	<u> </u>									

ملاحظة

- في البرنامج 9 ينصح ان لا يزيد وزن الملابس المراد غسلها عن 3.5 كيلو غرام.
- في البرنامج 13 ينصح ان لا يزيد وزن الملابس المراد غسلها عن 2 كيلو غرام.
- لوصف ضد الجعلكة: انظر اكوي أقل في الصفحة الجانبية، المعلومات المقدمة في اللائحة هي أرقام تقريبية.

غسيل يومي 30 دقيقة(برنامج 11 للأنسجة المستخرجة) مدروس لغسيل الملابس قليلة الاتساخ بمدة قصيرة من الزمن، يدوم 30 دقيقة تقريبا يسمح لكم توفير الزمن وتوفير الطاقة ، بوضع البرنامج (11 على 30 درجة مئوية) يمكن غسل ملابس من انسجة مختلفة، (ما عدى الحرير) بأقصى حمل غسيل 3 كغم ننصحكم استخدام منظفات الغسيل السائلة.



للخزانة

120

120

80

60

60

abla

للكوي

110

110

70

60

Ĭ

کثیر ۃ

الحفاف

130

130

90

65

65

اقصىي حمل

كغم

4

4

2.5

1

1

نوع الحمل

ملابس بمختلف

بشاكير ومناشف

شراشف تخوت،

بجمات، جوارب،

شلحات، كلسات،

المقاسات

قمصىان

الىكخره

نوع الانسجة

قطن، كتان

تريتال، قطن

قطن

اكر يلك

نايلون

اً وضع درجة الحرارة

بتدوير مقبض منظم درجة الحرارة يتم وضع درجة حرارة الغسيل (انظر الى لوحة البرامج في صفحة 22) يمكن تخفين درجة حرارة الغسيل حتى الوصول الى الغسيل بماء بارد ﷺ.

﴿ وضع عملية التنشيف

بتدوير مقبض عملية التتشيف يتم وضع نوع عملية التتشيف التي تر غبونها، يمكن اختيار احدى الطريقتين:

A - اعتمادا على الزمن: من 40 الى 150 دقيقة.

B - اعتمادا على درجة رطوبة الملابس المراد تتشيفها:

للكوى 🔀 : ملابس قليلا رطبة، سهلة الكوى.

للخزانة 🗂 : ملابس ناشفة يمكن وضعها مباشرة في الخزانة.

كثيرة الجفاف 🛱 : ملابش كثيرة الجفاف، ينصح للبشاكير وجكيتات الحمام.

عند انتهاء عملية التجفيف يتبعها فترة تبريد

اذا كانت كمية الملابس المراد غسلها وتنشيفها يزيد عن الكمية القصوى المنصوح استخدامها في دورة التنشيف (انظر الى اللوحة الموجودة على الجانب)، قوموا بعملية غسل جميع هذه الملابس وعند انتهاء دورة الغسيل، اقسموا حمل الغسيل الى قسمين ، ضعوا القسم الأول في الغسالة النشافة للقيام بعملية التنشيف متبعين التعليمات الخاصة فقط بعملية النتشيف وعند انتهاء هذه العملية ضعوا النصف الثاني وأعيدوا عملية

النتشيف من جديد للقسم المتبقى

فقط تنشيف

قوموا بعملية تدوير مقبض البرمجة حتى الوصل الى وضع التنشيف حسب نوع الانسجة المراد تتشيفها، ومن ثم اختاروا طريقة التنشيف التي تودونها وذلك بواسطة مقبض التنشيف.

مهم:خلال عملية التنشيف الجهاز يقوم بالقيام بعملية عصر دورانية اذا تم اختيار احد برامج القطن و أحد درجات التنشيف (كثيرة الجفاف 🥰 ،المخزانة 👚 ، للكوي 🔀)

- لتتشيف الملابس الصوفية يجب أن تتم فقط باختيار زمن التتشيف (180 - 100 - 60 - 40 دقيقة) لحمل 1 كيلو غرام ينصح استخدام زمن تتشيف 60 دقيقة. اذا تم بالخطأ استخدام احد درجات التتشيف (كثيرة الجفاف 🗘 ، للخزانة 🕆 ، للكوي 🔀) الجهاز يقوم بعملية تجفيف مستخدمة أقصى زمن للتتتشيف و هو (180 دقيقة)

- لحمل انسجة قطنية وزنها أقل من 1 كيلوغرام استخدموا البرنامج الخاص بتنشيف الانسجة المستخرجة.

اله ظائف

الوظائف المختلفة التي من الممكن استخدامها عند عملية الغسيل وموفرة من قبل الغسالة النشافة تساعد على الحصول على غسيل أنظف وبياض ناصع مثل رغبتكم، لاختيار الوظائف المختلفة يتم اتباع نفس الخطوات وهي كما يلي:

1. اضغط على الزر الخاص بالوظيفة التي تود استخدامها حسب اللوحة الموجودة في الاسفل.

2. اضاءة زر الوظيفة المختارة يدل على عمل هذه الوظيفة.

ملاحظة: اضاءة وانطفاء زر أي وظيفة من الوظائف بشكل متردد يشير الى أن هنه الوظيفة لا يمكن اختيارها واستخدامها مع البرنامج المختار .

تعمل مع البرنامج	ملاحظة للاستعمال	تأثیر ها	الاضافة
- 4 - 3 - 2 فضفضة	تذكروا صب السائل المبيض في الحوض الاضافي المشار له بالرقم 4 (انظر صفحة 24) لا يتماشى مع الاضافة اكوي أقل .	دورة تبيض الغسيل تعمل على از الة البقع الصعبة	ضد البقع
10 - فضفضة	وضع هذه الاضافة، البرامج 4-6 والفضفضة الحساسة يتم توقف برنامج الغسيل بوضع الملابس المغسولة تحت النقع (ضد الجعلكة) ومصباح دورة الفضفضة الحُثُا يبدأ بالاضاءة والانطفاء بتر دد - لانهاء دورة الغسيل اضغط على الزر بدء/شطب START/RESET - لانهاء دورة الغسيل اضغط على الزر بدء/شطب START/RESET - لاتمام البرنامج بعملية افراغ الماء ضع المقبض على الشعار المحاص الضغط على الزر بدء/شطب START/RESET لا تتوافق مع الاضافة ضد البقع إذا أردت القيام أيضا بعملية النجفيف، بجب مراعاة أن هذا الزرّ يعمل فقط إذا كان مقرون بمستوى حي ركم	يقلل تجعلك الانسجة، وسهل في عملية الكوي	اكوي أقل
9 - 4 - 3 - 2 - 1 - 13 - 12 - 10 - فضفضة	ينصح استخدامها للحمل الكبير أو عند استخدام كميات كبيرة من مسحوق الغسيل	تزيد من قدرة عملية الفضفضة	فضفضة اضافية
جميع البرامج ما عدى 6 و تفريغ الماء-7-8		يقلل من سرعة عملية العصر الدورانية	6 500 - 1000

عربي

حوض مساحيق الغسيل

النتائج الجيدة لعملية الغسيل تعتمد أيضا على كمية مسحوق الغسيل الصحيحة، عند وضع كمية أكثر من الحاجة من مسحوق الغسيل لا تتم عملية الغسيل بشكل فعال و تساعد على تكون ترسبات داخ المناطق الداخلية من الغسالة بالإضافة الى تلوث البيئة.

اخرج حوض مساحيق الغسيل من مكانه وضع مسحوق الغسيل والمساحيق الاضافية التي تودون استخدامها بالشكل التالي



الحوض 1: مساحيق الغسيل للاضافي (بودرة)

قبل صب مسحوق الغسيل تأكد من أن الحوض الاضافي رقم 4 ليس موجود هناك.

الحوض 2: مساحيق الغسيل العادي (بودرة او سائل)

المنظف السائل يتم صبه فقط قبل تشغيل الغسالة.

الحوض 3: مساحيق اضافية (منعمات، الى اخره)

السائل المنعم يجب أن لا يخرج خارج الشبكة

الحوض الإضافي 4: للتبيض

لا تستخدموا مساحيق غسيل خاصة بالغسيل على اليد لانها تكون رغوة كثيرة.
 دورة التبيض

المبيضات العادية تستخدم لتبيض الانسجة القوية البيضاء، والمبيضات الحساسة تستعمل لتبيض الانسجة المستخرجة والصوف.



ادخل الحوض الاضافي رقم 4 التي تكون مزودة مع الجهاز في الحوض رقم 1، عند صب السائل المبيض لا تتعدوا الحد max المشار له على العمود الموجود في وسط الحوض(انظر الى الشكل)

تحضير الملابس للغسيل

- افصلوا الملابس المراد غسلها حسب:
- نوع الأنسجة/ الشعار موجود على اللوحة المثبتة على الملابس
 - الألوان: افصلوا الملابس الملونة عن الملابس البيضاء
 - فرغوا الجيوب من محتواياتها وتأكدوا من ثبات الازرار
- ♦ لا تتعدوا القيم المشار لها، التي تتعلق بوزن الملابس المراد غسلها وهي جافة:
 انسجة قوية : اقصى حمل للغسالة 6 كغم

انسجة مستخرجة: اقصى حمل للغسالة 2.5 كغم

أنسجة حساسة: اقصى حمل للغسالة 2 كغم

صوف: اقصى حمل للغسالة 1 كغم

كم تزن الملابس؟

1 شرشف تخت 400-500 غرام
 1 غطاء وسادة 150-200 غرام
 1 شرشف طاولة أكل 400-500 غرام
 1 روب حمام 900-1200 غرام
 1 بشكير 150-250 غرام

انسجة خاصة

برادي: اطوي البرداية وضعها داخل غساء وسادة أو كيس شبكة، اغسلوها لوحدها دون تعدي وزن نصف حمل الغسالة، استخدموا برنامج رقم 6 الذي يفصل بشكل اوتوماتيكي عملية العصر الدورانية.

لحف و جكيتات ضد الهواع: اذا كانت حشوة هذه ريش بط أو حبش يمكن القيام بعملية غسلها داخل الغسالة، اقلبوا هذه الملابس وليكون الحمل الأقصى للغسالة لا يزيد عن 2-3 كغم، اعيدوا دورة الفضفضة مرة أو مرتين مستخدمين عملية العصر الحساسة.

صوف: للحصول على أفضل نتائج غسيل الصوف استخدموا سوائل أو مساخيق غسيل خاص لغسل الصوف وزن حمل الغسالة يجب أن لا يتعد 1,5 كغم

اذا أردتم استخدام دورة التبيض فقط قوموا بعملية صب السائل المبيض في الحوض الاضافي رقم 4 وضعوا برنامج الفضفضة الثمامي المسائل المبيض

للقيام بعملية التبيض خلال دورة الغسيل قوموا بعملية صب مسحوق الغسيل العادي و المساحيق الاضافية، ضعوا البرنامج الذي تودون استخدامه و شغلوا الوظيفة الاضافية التبيض (انظر صفحة رقم 23)

استخدام الحوض الاضافي رقم 4 يلغي عملية الغسيل الاضافي

تحذيرات ونصائح





عربي) غسالة نشافة الملابس تم تصميمها وتصنيعها لتكون خاضعة لجميع قواعد الأمن المتعارف عليها دوليا، هذه التحذيرات مقدمة لأسباب أمنية ويجب قرائتها بتمعن.

أمن عام

- هذا الجهاز درس وصمم لكي يكون جهاز للاستعمال البيتي.
- يجب استخدام الغسالة النشافة الكهربائية من قبل أشخاص بالغين وبحسب التعليمات الموجودة في هذا الكتيب.
 - لا تلمسوا الجهاز والأرجل عارية أو الأيدي أو الأرجل مبلولة أو رطبة.
- لا تفصلوا الجهاز من منبع التيار الكهربائي وذلك بشد سلك التغذية الكهربائية بل قوموا بسحب قابس التيار الكهربائي (الذكر) من منبع الكهرباء.
 - لا تفتحوا حوض مساحيق الغسيل خلال عمل الجهاز.
- لا تلمسوا الماء الذي يفرغ من الغسالة النشافة لأنة قد يصل الى درجات حرارة
- لا تشدو ا بقوة بأي حال من الأحو ال باب الغسالة النشافة و هو ما ز ال مقفل، لأنه من الممكن اتلاف جهاز الأمن الذي يمنع فتح باب الغسالة النشافة بشكل عفوي خلال عمل الجهاز.
- في حال حدوث خلل في الجهاز لا تحاول الوصول الى الأجهزة الداخلية لمحاولة تصليح الجهاز.
 - تأكدوا دائما من عدم تقرب الأطفال من الجهاز خلال عمله.
 - خلال عملية الغسيل باب الغسالة النشافة قد ترتفع درجة حراته ويصبح ساخن.
- اذا أردتم تحريك أو نقل الجهاز من مكانه استعن بشخص أو بشخصين وخذوا فائق الحذر الأن الجهز ثقيل والا تحاول القيام بهذا لوحدك.
- قبل ادخال الملابس داخل حوض غسيل الغسالة النشافة تأكد من حوض الغسيل
 - خلال عملية التنشيف يكون باب الغسالة النشافة ساخن
 - لا تقوموا بعملية تتشيف ملابس تم غسلها بمواد قابلة للاشتعال (مثل الكحول)
- لا تقوموا بتتشيف الاسفنج أو ملابس مصنوعة من مواد بلاستيكية أو ما يشابهها.
 - تأكدوا من أن محبس الماء يكون مفتوح خلال عملية التشيف
 - هذه الغسالة النشافة يمكن استخدامها فقط لنشيف ملابس تم غسلها بما

التخلص من النفايات

- التخلص من مواد التغليف:
- احترم القوانين المحلية، لأنه من الممكن الاستفادة من التغليف واعادة تصنيعه
 - التخلص من الغسالة النشافة القديمة:
- قبل التخلص منها اجعلها غير صالحة الاستعمال وذلك بقطع سلك التغذية الكهربائية وبخلع باب الغسالة النشافة.

الاقتصاد واحترام البيئة

التكنولوجيا في خدمة البيئة

اذا رأيتم من خلال باب الغسالة النشافة ماء قليل ذلك لأن التكنولوجيا الجديدة المصممة من قبل شركة ارستن يكفي أقل من نصف كمية الماء للحصول على أفضل نتائج الغسيل: هدف من الأهداف لحماية واحترام البيئة.

التوفير في مسحوق الغسيل، الماء، الطاقة الكهربائية، والزمن

- لعدم التبذير والاسراف في الدخل استخدموا الغسالة النشافة عندما يتوفر حملها الكامل، حمل كامل للغسالة النشافة مكان حملين بنصف الكمية يوفر 50% من
- عملية الغسيل البدائي ضروري فقط عندما تكزن الملابس كثيرة الوسخ، تجنب عملية الغسيل البدائي يوفر في مسحوق الغسيل، الزمن، ماء وما بين 5 الى 15% من الطاقة المستهلكة.
- استخدام مزيل للبقع أو ترك الملابس في النقع قبل القيام بعملية الغسيل تقلل من ضرورة القيام بعملية الغسيل على درجات حرارة عالية، برنامج على 60 درجة مئوية بدل من 90 درجة مئوية أو دورة غسيل على 40 درجة مئوية بدل من 60 درجة مئوية توفر حتى 50% من الطاقة الكهربائية .
- استخدم كمية مسحوق الغسيل بالتناسب مع قساوة الماء المستخدم في عملية الغسيل، ومع درجة وساخة الملابس ومع كمية الملابس المراد غسلها، تجنب الاسراف واحمى البيئة، حتى لو كان مسحوق الغسيل قابل للتحلل، لا انة يحتوي على مواد كيماوية التي تتلف التوازن البئي، وايضا تجنبوا استخدام المنعمات.
- القيام بعلية الغسيل بو اسطة الغسالة النشافة الكهربائية في المساء حتى ساعات الصباح المبكر تخفف حمل امنصاص التيار الكهربائي على شركة الكهرباء حيث تكون تعمل المصانع والشركات.
- اذا كان الغسيل يجب أن تتم عملية تجفيفة بواسطة مجففة كهربائية، استخدموا أقصىي سرعة عصر دورانية، قلة الماء الموجود في الملابس المراد تجفيفها توفر عليكم زمن وطاقة في برنامج التنشيف.


افصلوا الماء والطاقة الكهربائية

- أغلقوا محبس الماء بعد كل عملية غسيل، بهذا الشكل يتم التقليل من استهلاك الشبكه الهديور وليكي لغسالة النشافة الملابس ويتم ازالة خطر تسرب الماء من
- افصل قابس التيار الكهربائي (الذكر) من منبع التيار الكهربائي عند القيام بعملية تنظيف الجهاز وخلال عمليات الصيانة لغسالة النشافة الملابس.

تنظيف غسالة نشافة الملابس

المنطقة الخارجية والمناطق المصنوعة من الكوشك يمكن تنظيفها بواسطة قطعة قماش مبلولة بماء فاتر وصابون، لا تستخدموا مواد محللة أو خادشة.

تنظيف حوض مساحيق الغسيل

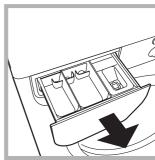


اخرج الجارور من مكانه وذلك برفعه

تنظيف مضخة تفريغ الماء من الغسالة النشافة


الغسالة النشافة مزودة بمضخة تفريغ الماء من الغسالة النشافة قادرة على تنظيف نفسها بنفسها وليست بحاجة الى أيه عملية تنظيف أو صيان ، ولكن من الممكن أن يحدث أن أشياء صغيرة مثل (قطع معدنية أو أزرار) قد تقع داخل الحجرة الأمامية للمضخة هذه الحجرة تحفظ المضخة من التلف وتكون موجودة في المنطة السفلية

لا تأكد من انتهاء برنامج الغسيل وافصل الجهاز من منبع التيار الكهربائي.

للوصول الى الحجرة الأمامية من المضخة:

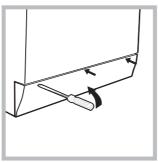


1. اخلع الغطاء الذي يغطي الجهاز من ألامام وذلك باستخدام مفك (انظر الى الشكل)

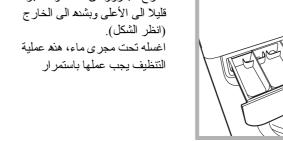

2. فك الغطاء وذلك بندويره بعكس اتجاه دوران عقارب الساعة (انظر الشكل) من الطبيعي خروج قليلا من الماء عند فتح الغطاء.

الحفاظ على باب الغسالة النشافة و حوض غسيل الغسالة النشافة

● اترك دائما باب الغسالة النشافة نصف مفتوح وذلك لتجنب تكون روائح كريهة داخل حوض غسيل الغسالة النشافة.

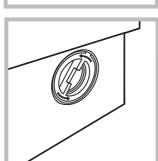

3. نظفوا داخل الحجرة جيدأ 4. ركب الغطاء من جديد 5. ركب الغطاء الخارجي للجهاز وتأكد قبل ضغطة باتجاه الجهاز من دخول الألسنة في الفتحة الخاصة بهم.

افحص خرطوم تغذية الجهاز بالماء

افحص الخرطوم الذي يغذي الجهاز بالماء مرة في السنة على الأقل، اذا كان ظاهر ا علية شقوق او أماكن تالفة يجب القيام بعملية تبديله، خلال عملية الغسيل ضغط الماء العالي من الممكن أن يسطح هذا الخرطوم.

لا تستخدموا أبدا خراطيم مستعملة .

شذوذ في عمل الجهاز



عربي من الممكن أن غسالة الملابس لا تشتغل، قبل الاتصال بقسم الصيانة الفنية (انظر صفحة 28) تأكد من أنها ليست مشكلة سهلة الحل، لنستعين بهذه الللائحة.

لأسباب الممكنة/حلول	١
---------------------	---

● قابس التيار الكهربائي (الذكر) ليس موضوع في منبع التيار الكهربائي، أو ليس مدخل بالكمية الكافية حتى يتم التوصيل.

● في البيت لا يوجد تيار كهربائي

• باب الغسالة النشافة غير مغلق بشكل كامل

● الزر (ا) ليس مضغوط

● الزر START/RESET غير مضغوط

محبس الماء غير مفتوح

• خرطوم تغذية الجهاز بالماء غير مربوط بمحبس الماء

● خرطوم الماء مطوي

● محبس الماء غير مفتوح

● في البيت لا يوجد ماء ● ضغط شبكة الماء غير كافي

● الزر START/RESET غير مضغوط

● خرطوم تقريغ الغسالة النشافة من الماء غير موضوع على ارتفاع ما بين 65 و 100 سنتمتر عن سطح الأرض (انظر صفحة 17)

● حرف خرطوم اخراج الماء من الغسالة النشافة مغمور في الماء (انظر صفحة 17)

● مصرف الماء الموجود في الحائط لا يوجد له منفس لهواء

اذا بعد كل هذه الفحوصات المشكلة لم تحل، اغلق محبس الماء، اطفىء الجهاز، واستدعي قسم الصيانة الفنية، اذا كانت الشقة موجودة في اخر طو ابق البناء من الممكن حدوث ظاهر ة شفط للماء الموجود داخل الغسالة النشافة عن طريق المصرف الموجود في الحائط، ولهذا الغسالة النشافة تأخذ الماء والمصرف يفرغه منها، لحل هذه المشكلة موجود في الأسواق صمامات ضد شفط المصرف.

● البرنامج لا يقوم بعملية تقريغ الماء، في بعض البرامج يجب تشغيل التقريغ وعملية العصر يدويا. (انظر الي صفحة 22)

● موضع الوظيفة الاضافية الكي القليل: لتكملة البرنامج اضغط على الزر START/RESET (انظر صفحة 23)

● خرطوم تفريغ الماء من الغسالة النشافة مطوي (انظر صفحة 17)

● ماسورة مصرف الماء مسدودة.

● حوض الغسيل لم يتم تحريره عند عملية تركيب الجهاز (انظر الى صفحة رقم 16)

● غسالة النشافة الملابس ليست موضوعة في مكان مستوي (انظر الى صفحة رقم 16)

● الغسالة النشافة محشورة بين الأثاث والحائط (انظر الى صفحة رقم 16)

● خرطوم تغذية الغسالة النشافة بالماء ليس مشدود بالشكل الكافي (انظر الى صفحة رقم 16)

● حوض مساحيق الغسيل مسدود من بقايا مساحيق الغسيل (للقيام بعملية تنظيفه انظر صفحة 26)

● خرطوم تغريغ الماء من الغسالة النشافة ليس مثبت جيداً (انظر الى صفحة رقم 17)

● استدعوا قسم الصيانة الفنية لأنه يشير الى وجود عطب في الجهاز

مصباح التشغيل/باب مقفل يضيء وينطفيء بسرعة بشكل متردد مع على الاقل مصباح اخر

● مسحوق الغسيل غير خاص لغسيل بغسالة كهربائية (يجب أن يكون مكتوب علية خاص بغسالة كهربائية أو على اليد وفي غسالة أو اي شي

يشير الى امكانية استخدامه للغسالة) ● الكمية المستخدمة كبيرة

● قابس التيار الكهربائي (الذكر) ليس موضوع في منبع التيار الكهربائي، أو ليس مدخل بالكمية الكافية حتى يتم التوصيل.

● في البيت لا يوجد تيار كهربائي

● باب الغسالة النشافة غير مغلق بشكل كامل

● مقبض التنشيف موضوع في الوضع 0

دورة الغسيل لا تبدأ

الغسالة النشافة لا تشتغل

الغسالة النشافة لا تأخذ ماء

الغسالة النشافة تأخذ الماء وتفرغه باستمرار

الغسالة النشافة لا تفرغ الماء ولا تقوم بعملية العصر الدورانية

غسالة النشافة الملابس تهتز كثيرا خلال عملية العصر الدورانية

الغسالة النشافة تفقد ماء

يتكون كمية كبيرة من الرغوة

الغسلة النشافة لا تنشف

195068506.03 03/2008 - Xerox Business Services

 \bigcirc

قبل استدعاء الصيانة الفنية:

- تأكد من الخراب أو العطب يمكن حل هذة المشكلة لوحدكم (انظر صفحة رقم 27)
 - أعد تشغيل الغسالة لتأكد من العطب تم حله والغسالة اشتغلت بالشكل الصحيح.
 - في حالة العكس، استدعوا قسم الصيانة الفنية المخولة من قبل الشركة الصانعة .
- لا تستعينوا أبدا بفنيين غير مخولين من قبل الشركة الصانعة بالقيام بعملية الصيانة.

أعطوا المعلومات التالية:

- نوع الخراب
- مديل الجهاز (Mod)
- ●رقم التسلسلي للجهاز (S/N)

هنه المعلومات تكون موجودة على لوحة المواصفات الفنية الملصقة على المنطقة الخلفية من غسالة النشافة الملابس.